






Installation manual Light curtain




Manuel d'installation Rideau lumineux


Montageanleitung Lichtgitter

Instalační manuál Světelná mříž


Installations manual Ljusridå

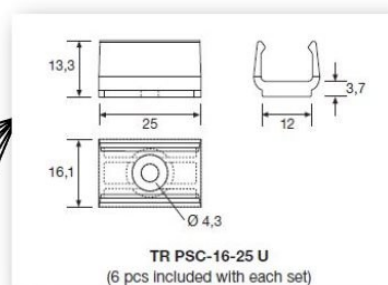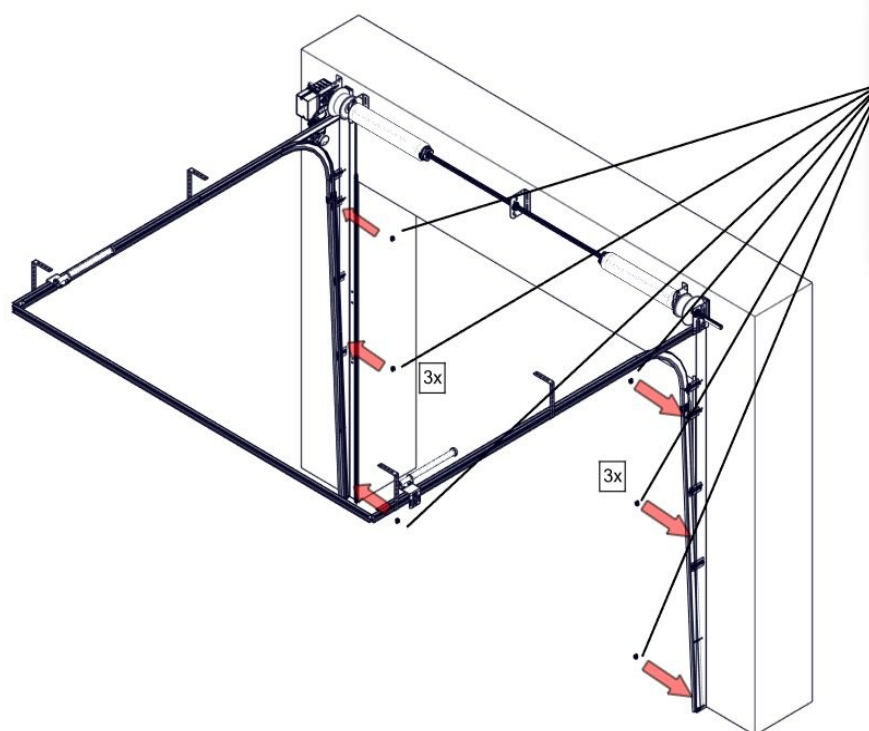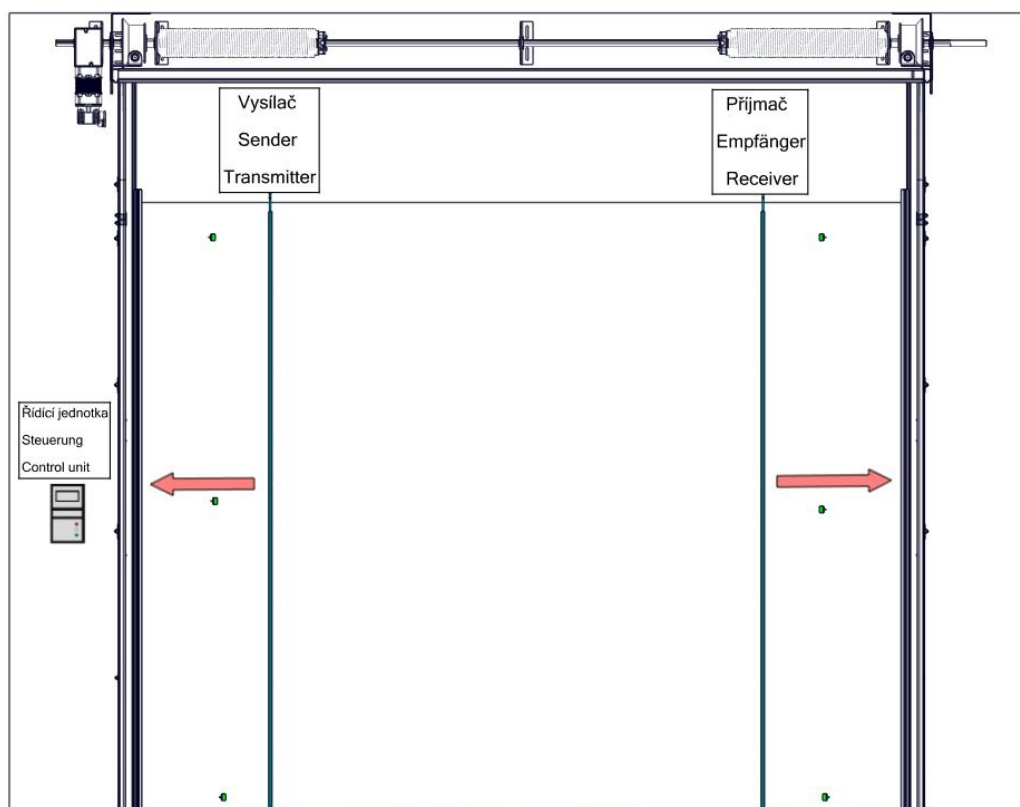

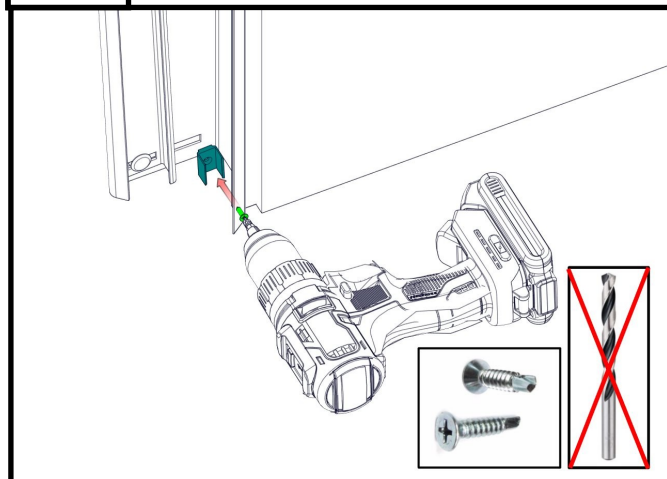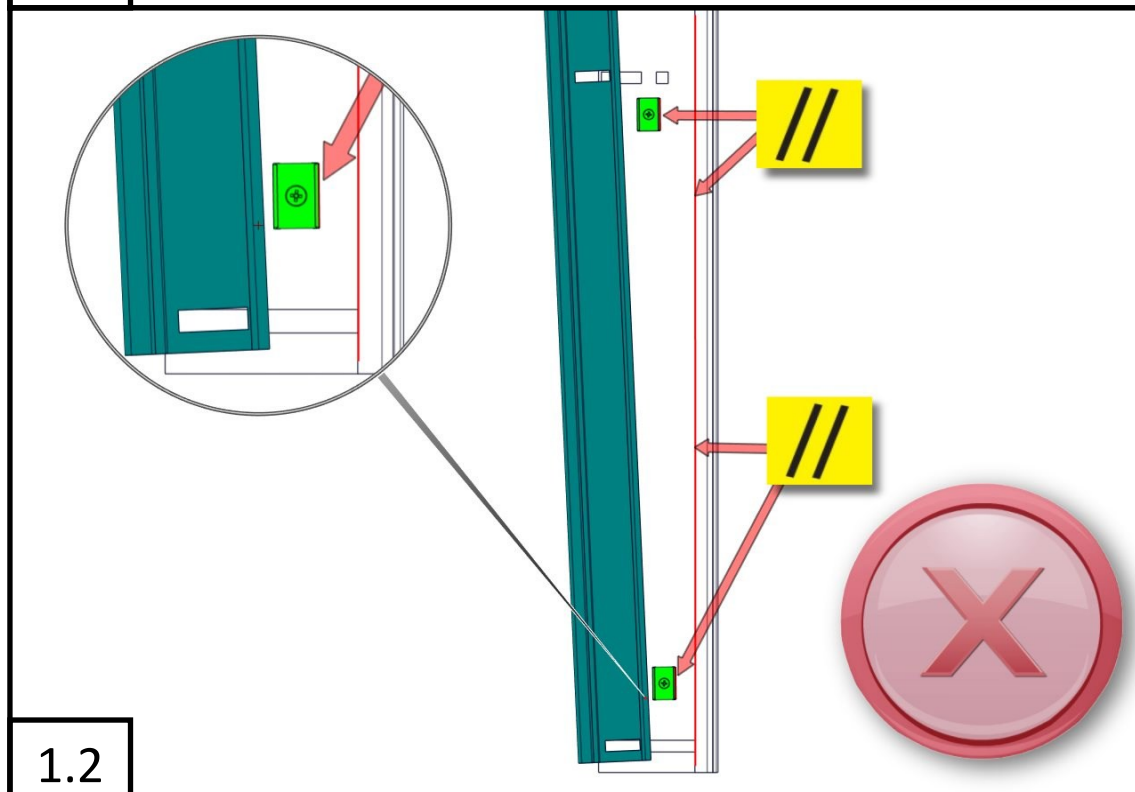
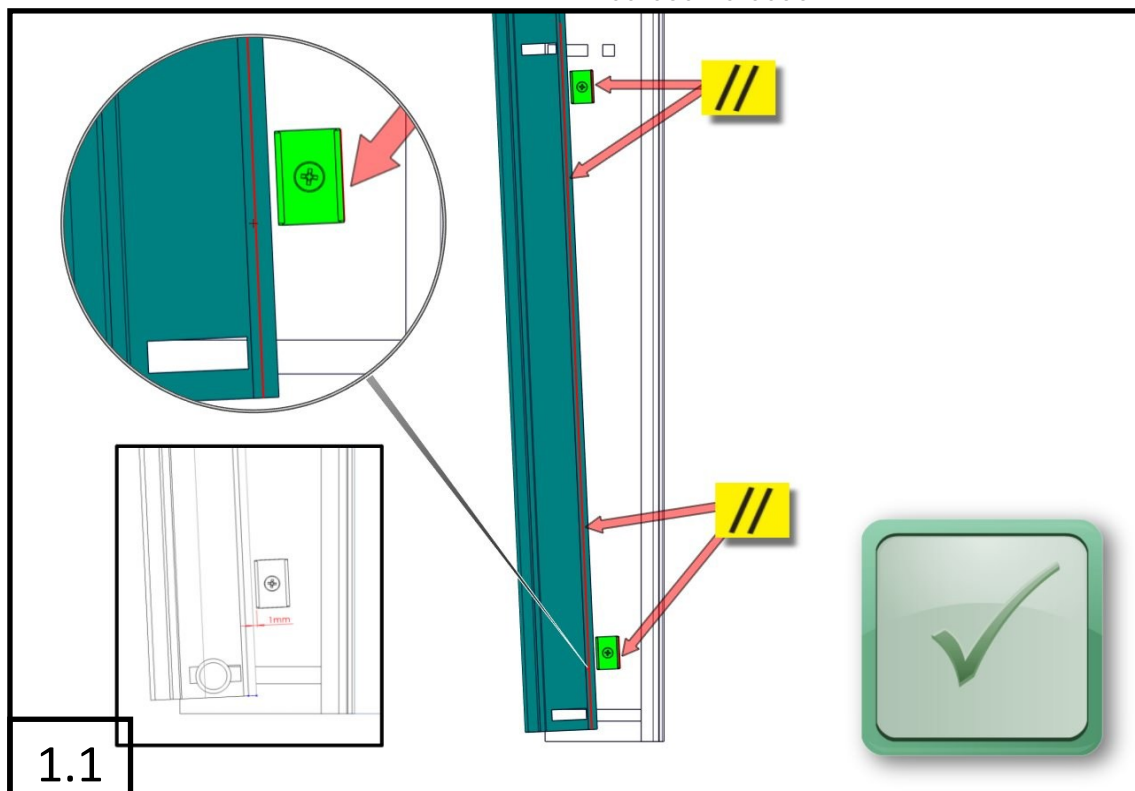


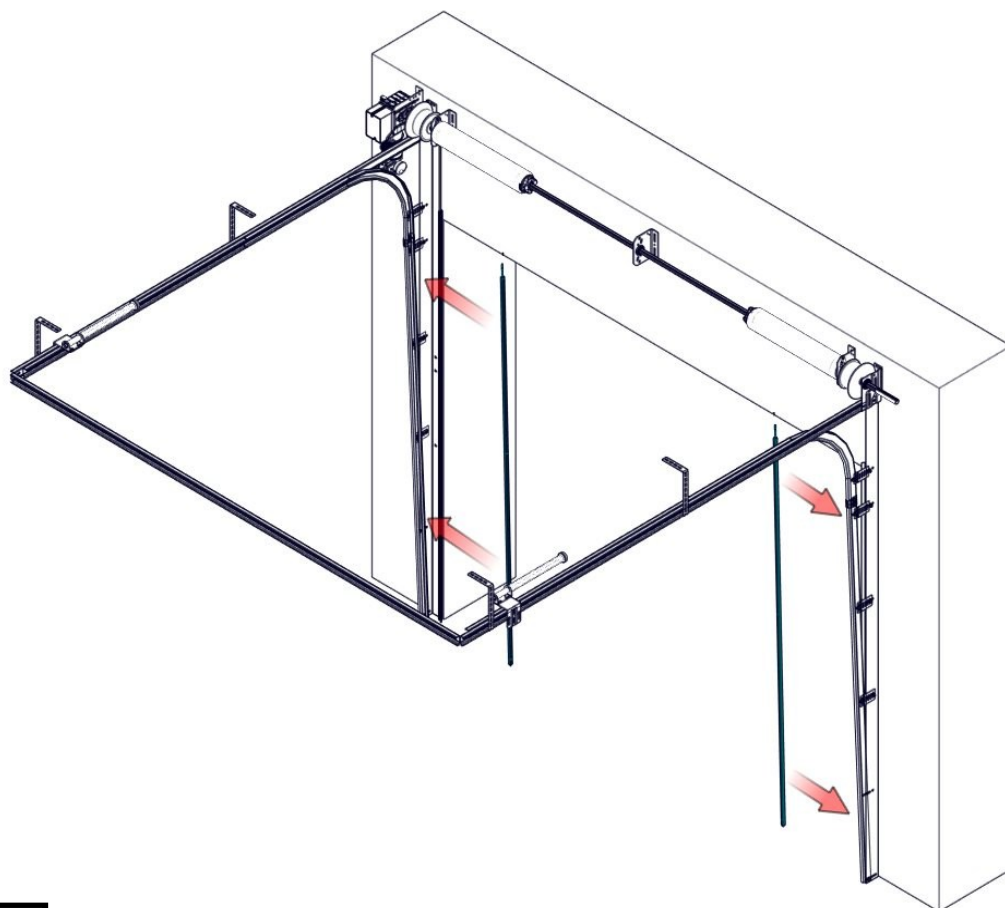

1.3

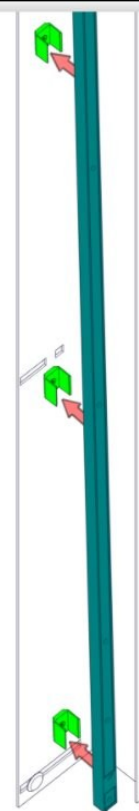

1.4

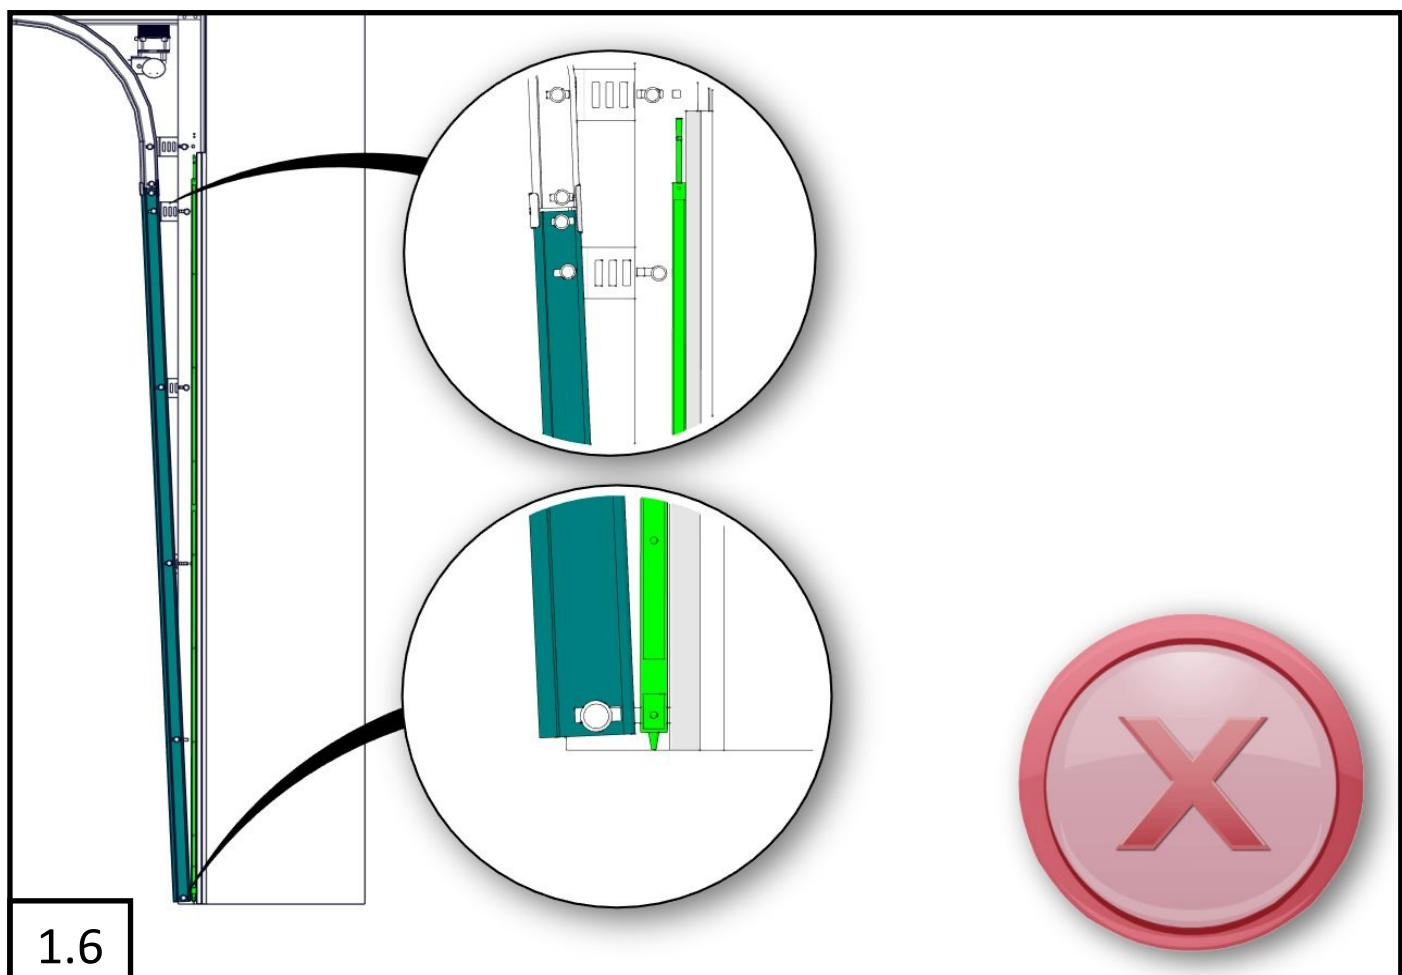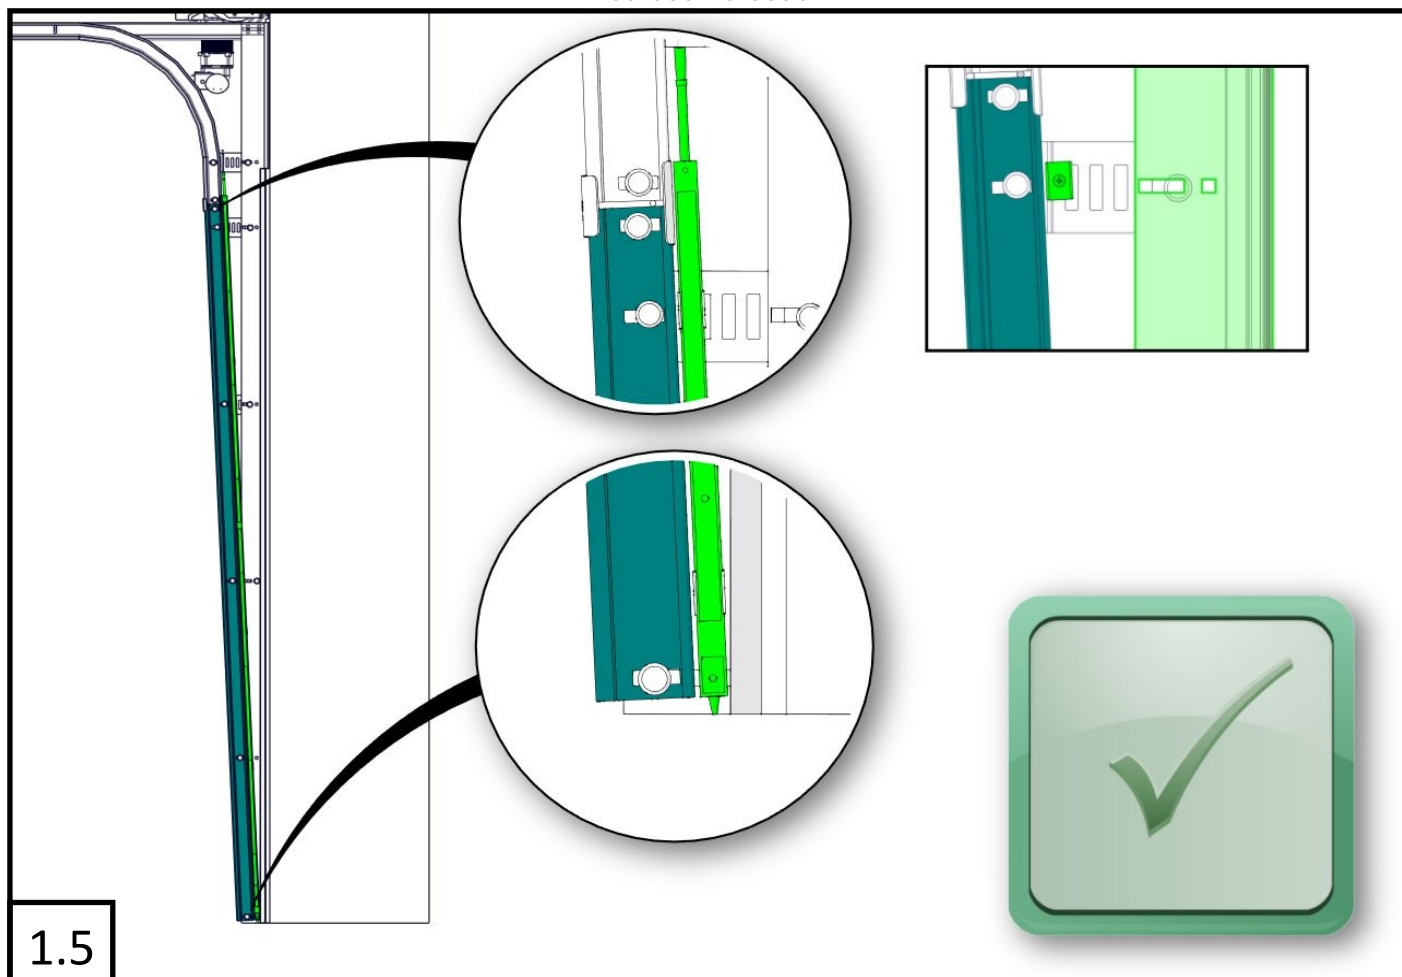

Wiring connection TELCO light curtain

TELCO

Transmitter - Black 4 wire cable / 15 meters

Receiver - Grey 4 wire cable / 5 meters



CUBE control unit

Supply +	Brown		Brown
Comomn Sync	White *		White *
Supply -	Blue		Blue
Control Input	Black		Black
OSE Output			Black

BR - Brown
WT - White
Not use
GR - Green

WT / SD =NC contact or bridge

* White wires must be together - Common Sync

TELCO

Transmitter - Black 4 wire cable / 15 meters

Receiver - Grey 4 wire cable / 5 meters



GFA control unit

Supply +	Brown		Brown
Comomn Sync	White *		White *
Supply -	Blue		Blue
Control Input	Black		Black
OSE Output			Black

X 2.1 **
X 2.5
Not use
X 2.3

* White wires must be together - Common Sync

** X 2.1-2.2 Resistor 5K or X 2.2 resistor in serie with NC contact

TELCO

Transmitter - Black 4 wire cable / 15 meters

Receiver - Grey 4 wire cable / 5 meters



MFZ control unit

Supply +	Brown		Brown
Comomn Sync	White *		White *
Supply -	Blue		Blue
Control Input	Black		Black
OSE Output			Black

X 4.1
X 4.2
Not use
X 4.7

SKS set on MOD 4

* White wires must be together - Common Sync



https://door-documents.com/library/EN/Industrial%20doors%20INDY/Manuals/EN_CZ_DE_Light_curtain_installation_manual.pdf